

Missy Half Scale Miniture Dress Form Assembly Guide

Parts:1x Base



1x Topper



1x Dress Form



(BOTTOM) OF INNER POLE

x1 Inner Pole

SLIT (TOP) OF INNER POLE



RING LOCK

x1 Outer Pole



(BOTTOM) OF OUTER POLE

(TOP) OF OUTER POLE




2nd RING LOCK (LOCATED ON THE OUTER POLE)

1st RING LOCK (LOCATED ON THE SIDE OF THE BASE)

Step 1: Place Base on floor, insert the Inner Pole (Bottom downward) into the hole of the base until it makes contact with the foot pedal, then tighten the **1st Ring Lock** that is attached to the base.

Test: Step on foot pedal, you should feel some resistance. (The Pole should not move)

Step 2: Hold down the foot pedal while you use one hand to manually align the "slit" on the top of the inner pole. As you continue to hold down the foot pedal, use your other hand to place the outer pole over the inner pole once aligned.

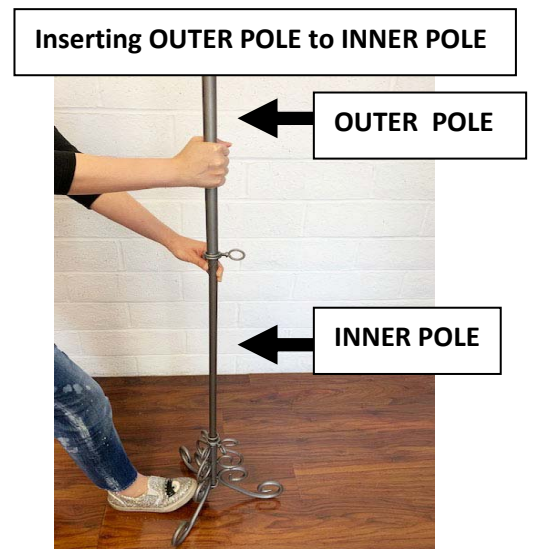

Step 3: Gently insert the dress form over the outer pole and secure dress form with topper and you're done!

Dress Form Usage Tips: Adjust the height of your form by holding down the foot pedal and manually

raising the pole or down by hand. Release pedal once at desired height, you may use **2nd Key Lock** to lock your pole in place.

Questions?

Need Help?

Call us!

Toll Free: 1-888-818-1991

