
PGM Large Women Plus Size Full Body Dress Form Assembly Guide (612L)

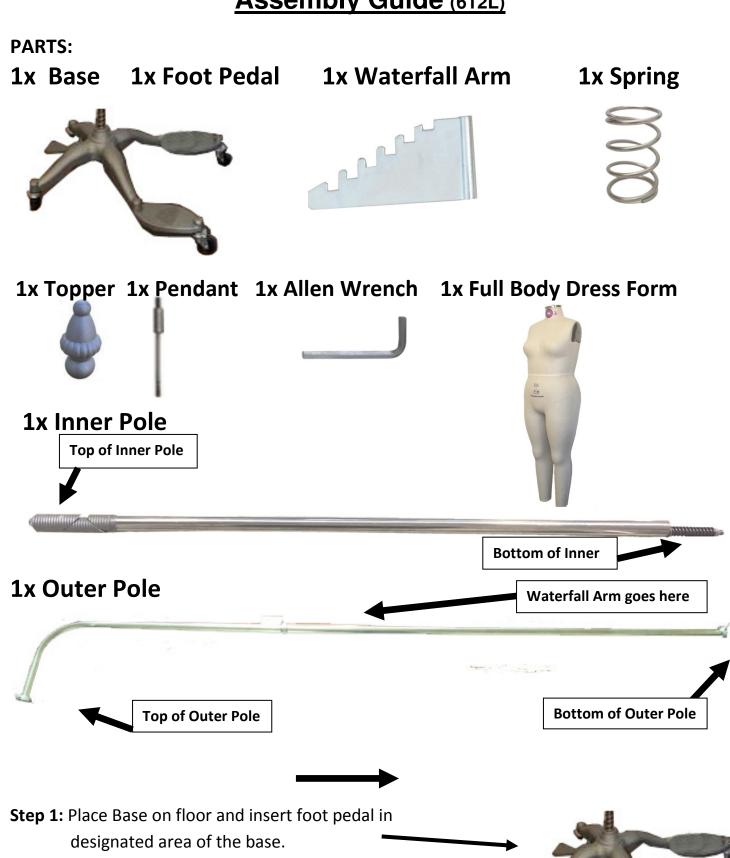

Step 2: Insert the Inner Pole (Bottom downward) into the hole of the base until it makes contact with the foot pedal. Use the provided "Allen Wrench" to tighten the small bolt on the side of the base once done.

Test: Step on foot pedal, you should feel some


resistance. (The Pole should not move)



Step 3: Insert the spring over the Inner Pole until it is sitting on the base.

Step 4: Hold down the foot pedal while you use one hand to manually align the "slits" on the top of the inner pole. As you continue to hold down the foot pedal use your other hand to

place the outer pole over the inner pole once aligned.

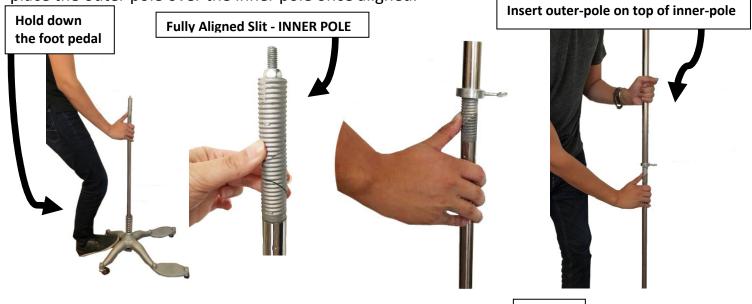

Finished

Step 5: Insert waterfall piece in rear outer pole slot.

Step 7: Hand tighten pendant into the dress form neck along with topper.

Step 8: Hang your dress form on the stretcher and tighten to hold form in place and your done!

> Questions? Need Help? Call us! 1-888-818-1991 - Toll Free www.pgmdressform.com